

Doncaster Pubwatch

CASÉD Radio User Instructions

Top left rotary control: On/Off Volume

Rotating this fully anti-clockwise will switch the radio off, turning clockwise will turn the radio on and raise the volume level. For normal use, set the control at the 11 to 12 o'clock position.

Top right rotary control: Channel Selector

Leave this set to position 1. The other positions are not currently used.

Top Orange button: Emergency

This is the Emergency button and is only to be used in situations where personal safety or damage to property could arise. **This does not replace the Emergency 999 call.**

Press and hold the button for 2 seconds, the radio will then transmit it's unique identity and the text!! Emergency!! will be displayed on the control radio.

Top side button: Clear Down

Similar in function to hanging up the phone after a telephone call, if you make a call to other radio users, use this button to "hang -up" when finished.

Large side button: PTT

Press this button to talk and release to listen.

Lower side button: CCTV / Priority call (Dimpled button)

Pressing this button includes CCTV in a conversation.

Press this button once to alert CCTV, once they have responded, use the PTT button to talk back.



Charging the battery:

Before first use, make sure the radio is switched off and place in the desktop charger overnight for at least 14 hours. This conditions the battery for future use.

After this first charge, simply place in the charger at the end of a shift and remove when the light is steady green.